


Nitrilite® Ultra-Clean

93-402

The ultra-low particulate and ultra-low extractable version of Nitrilite, with improved electrical properties. Introduced in 1993, Nitrilite® is the original thin-mil nitrile cleanroom glove. Manufactured in a controlled environment facility, Nitrilite Ultra-Clean is specially processed to be exceptionally clean and low in extractables with excellent electrical properties.

Industry Leading Gloves from the Industry Leader


Ansell is the world leader in nitrile gloves for the cleanroom industry. All gloves are produced from the highest quality materials in climate controlled

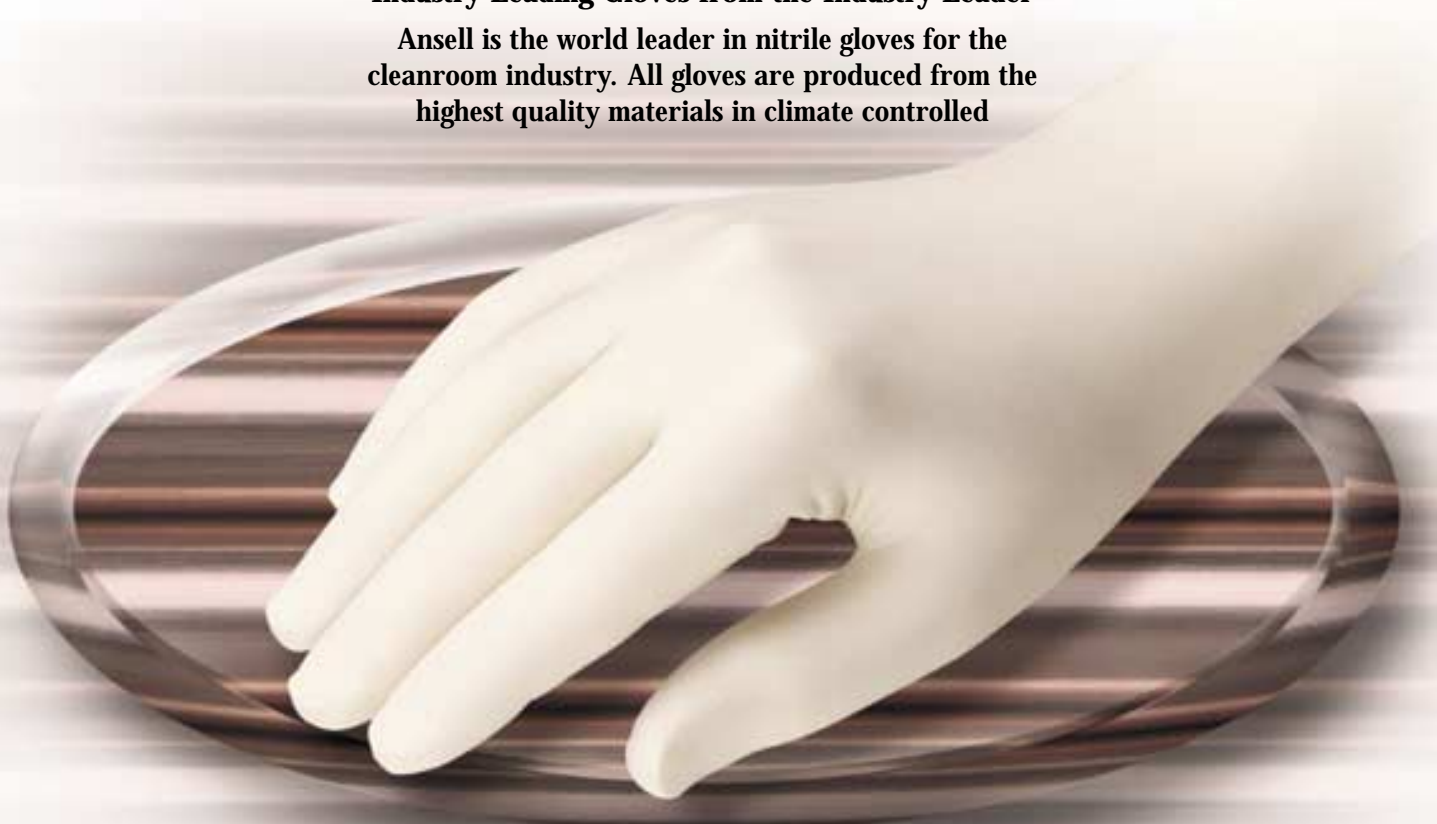

manufacturing facilities that produce *only* nitrile gloves.

All Ansell gloves are produced and tested in accordance with ASTM standards and IEST recommended practices and are lot numbered and documented, ensuring the utmost consistency. Supporting you with the largest global technical group—Ansell is your best choice.

Recommended Usage:
Applications requiring an exceptionally clean glove with good electrical properties – Disk Drive, Electrical Device Manufacturing, BioTech, Flat Panel

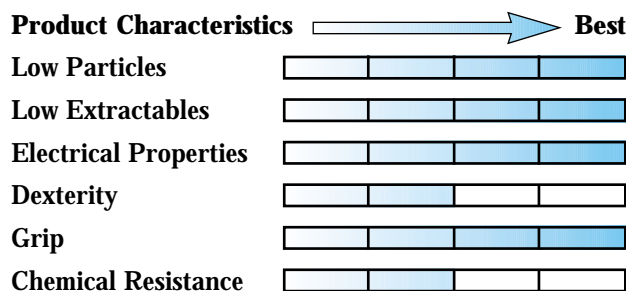

Technical Data

93-402

Material	100% nitrile polymer, manufactured in a clean environment.
Glove Design	Ambidextrous, ergonomically designed for improved dexterity, comfort and long wear.
Cuff Design	Rolled, beaded cuff to enhance donning.
Color and Finish	Natural white. Textured fingers for better feel and grip.
Cleanroom Compatability	Gloves are packed in a certified Class 100 cleanroom; double-bagged in cleanroom-compatible packaging and packed in a lined shipping carton. All printing done with cleanroom-compatible IPA-resistant ink. AQL for pinholes: 1.5
Quality Standards	Each lot tested, certified and documented. Lot number printed on all packaging.

Electrical Properties

Resistivity	1x10 ¹¹ ohms/square at 12.5% humidity (ASTM D257, EST S11.11) 1x10 ¹⁰ ohms/square at 50% humidity
Static Decay	<5 seconds @ 12.5% humidity (FTM Std 101C-Method 404) <2 seconds @ 50% humidity)

Extractable Values

	Specification
Particulates (particles/cm ²)	<800
IPA Non-Volatile Residue (µg/cm ²)	<10

Ionic Content

	Specification
Aluminum (Al ³⁺)	0.0200 µg/cm ²
Chloride (Cl ⁻)	<0.200 µg/cm ²
Copper (Cu ²⁺)	0.0100 µg/cm ²
Iron (Fe ³⁺)	<0.020 µg/cm ²
Lithium (Li ⁺)	<0.0004 µg/cm ²
Magnesium (Mg ²⁺)	0.0050 µg/cm ²
Nitrate (NO ₃)	<0.100 µg/cm ²
Potassium (K ⁺)	0.0200 µg/cm ²
Silicone (Mg/Cm ²)	ND
Sodium (Na ⁺)	<0.050 µg/cm ²
Sulfate (SO ₄ ²⁻)	0.0100 µg/cm ²
Zinc (Zn ²⁺)	<0.0700 µg/cm ²

Test methods per IEST-RP-CC005.2 using an orbital shaker. ND=None Detected

Typical Physical Values

Thickness:					
Finger Tip	0.16 mm/6 mil				
Palm	0.12 mm/5 mil				
Cuff	0.10 mm/4 mil				
Tensile Strength	Before Aging: 20.7 Mpa min. / 3,000 psi min.				
Elongation	Before Aging: 300% min.				
Sizes:	XS (5-5.5)	S (6-6.5)	M (7-7.5)	L (8-8.5)	XL (9-9.5)
Palm Width – mm	85	85	95	105	115
Surface Area – cm ²	1166	1287	1375	1450	1665
Length	300 mm/12 inches				

Packaging

50 gloves vacuum-sealed in an unprinted polybag, two bags of 50 gloves per master polybag; 10 master bags per lined carton. 1,000 gloves per case. Polybags are easy opening and printed with IPA-resistant ink.

NOTE: The information contained herein represents typical performance values and characteristics for the product and is not to be construed or used as actual product performance specifications.



Canada- 105 Lauder; Cowansville, Que. J2K 2K8
Tel. 800-363-8340 Fax. 888-267-3551
United States- 1300 Walnut St.; Coshocton, OH 43812
Tel. 800-800-0444 Fax. 800-800-0445
www.ansellpro.com/ce



CE 0493

©2003 Ansell Occupational Healthcare
All Rights Reserved.
Nitrilite 402-1/03